

# Thank You

Datexx would like to express our appreciation for your purchase by inviting you to register at

 
**www.datexx.com**

**to receive a free extended warranty!**

Datexx Registered Members will also receive exclusive access to online sales and discounts throughout the year. We offer a wide variety of products that are great for gifts and your every day life.

## Register Today

## Accounts

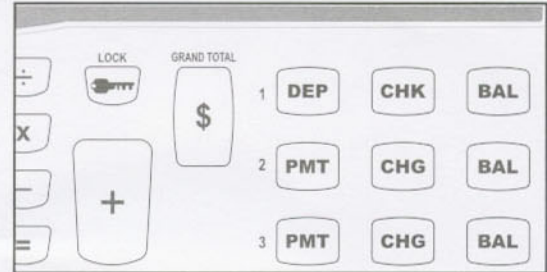

You can manage up to 3 separate accounts with this calculator, for example, a checking, a savings, and a credit card account, and are listed as 1, 2, or 3 on the right side of the calculator. Account balances are in your control. Just be sure to select the required action button for the corresponding account.

**For example,** let's say you want to deposit \$1,000.00 into your 1st account. To do so, please enter 1000.00 then press the 'DEP' button of your 1st account. To check that the value was entered correctly, press the 'BAL' button of the 1st account to view your balance.

Enter Deposit Amount - \$1000.00 Press **DEP**  
\$1000.00 dollars in now deposited.

**Another example,** let's say you have now written a check for \$200.00 and would like to record that. To do so, enter 200.00 then press the 'CHK' button. You'll now see that your check value has been recorded and your balance is now \$800.00.

Enter \$200.00 and Press **CHK**

 
The withdraw amount will now show.



The above procedure are the same for your other 2 accounts, marked with 2 and 3 on the right side of the calculator.

**Please note** that in order to record your deposits and payments, you should enter the value first, then press the corresponding 'DEP' or 'CHK' button.

GRAND TOTAL



Gives the Total amount of all account balances. It will retain account information when turned off.

**Email: sales@datexx.com Tel: 908-9648109**

## Decimal Mode / Floating Mode





When the calculator is turned on it is automatically in Decimal Mode (0.00). The Letters AM (Auto Money) appear on the screen.

Press the **A/F** To switch to Floating Mode for regular calculations. To return to the Decimal Mode press **A/F** again and you will see AM return to the screen.

## Security Code (Not Needed)

 


If you would like to protect your entries or privacy, you can enter a security code. Enter a 4 Digit Code and Press **LOCK**

You will see a  on the screen. Enter the Code again and Press **LOCK**. If the  disappears the code is set. If not, repeat.

## How To Reset

### NOTE: Resetting the unit will erase all data

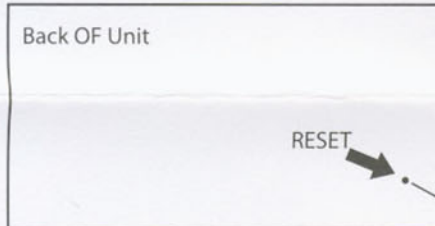

Insert a paper clip into the small hole on back of the Unit.

Press Gently, and the calculator will reset (0.00)

**To reset** account balances to zero, reset the device by removing and re-installing the battery, or inserting a small paper clip into the reset hole on the back of the unit.

## Warranty: With Proof Of Purchase

Please contact us at

