 


Money is a limited resource. Managing it is easy with our Checkbook Calculator. By entering a transaction as it happens, you will always have an up-to-date balance, which helps prevent bank overdraft charges. Checking your balance with this device is also much safer than using your smartphone where one can easily be hacked.


The Checkbook Calculator is just plain simple! Just enter your numbers first, then function second. For example, to make a deposit of \$1,000, key in 1000 then press the **DEPOSIT** key. To write a check for \$200, key in 200 then press **CHECK**. Check your balance at any time by pressing the **BALANCE** key. The unit remembers your balance, even when you shut it off. You have total control of your money!

GET STARTED

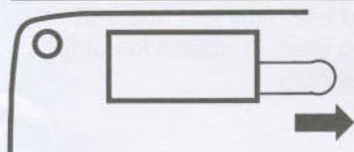

NOTE: Before using, the plastic tab must be removed from the battery compartment


Turn unit on by pressing ON key

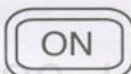

SET TIME

Hold down the % key for 3 seconds. Key in Month, Day, Year, Hour, and Minute.

Then press the + key, then the = key to set.

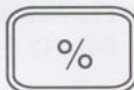

SET TAX RATE

Enter the tax rate value then press the **TAX RATE** key.

Example: To set the tax rate to 6%, key in the number 6, then press the **TAX RATE** key. The tax rate is now 6%



TAX FUNCTION

What is the total amount for a \$300 item including tax?








Key in 300 then press the **TAX** key. Then press the = key to get the total amount, including tax. In this case the total is \$318



CHECKING

CREDIT CARD

SAVING

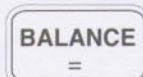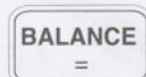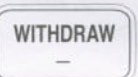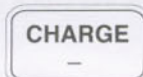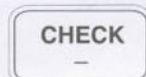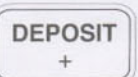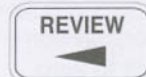

You can manage up to 3 separate accounts with this calculator, for example, a checking, a savings, and a credit card account, and a credit card account, which are listed as on the right side of the calculator, as detailed above.

HOW DOES IT WORK

Let's say you want to deposit \$1,000 into your checking account. To do so, enter 1000 then press the **DEPOSIT** key under **CHECKING**. To check that the value was entered correctly, press the **BALANCE** key under **CHECKING** to view your balance.

Enter Deposit Amount 1000
\$1000 dollars in now deposited.

Press **DEPOSIT**
+

Now say you write a check for \$400. Enter 400 then press the **CHECK** key under **CHECKING**. Press the **BALANCE** key and you will see \$600 is your new balance.

Enter Check Amount 400
\$400 dollars in now withdrawn.

Press **CHECK**
-

To check balance
Balance is displayed

Press **BALANCE**
=

At any point you can use the **REVIEW** button to review your last 20 transactions for each account.

To review recent entries
You can go back and view the last 20 entries

Press **REVIEW**
◀

The above procedure is the same for your other 2 accounts, listed as CREDIT CARD and SAVING.

RESETTING THE CALCULATOR

If your calculator does not appear to be working correctly, or you want to reset all accounts back to zero, use a ball point pen tip to gently apply pressure to the RESET hole on the back of unit

Caution: This deletes all account records, resets the date to 1-01-00, and returns the clock to 0:00 on a 24-hour format.




REPLACING THE BATTERIES

Your 3 Memory Checkbook Calculator uses two type 386A batteries for power. If the display dims, follow these steps to replace the batteries.

Note: You must replace the batteries within 3 minutes to retain all balance records, date, and time.

Make a note of the balance before you begin.

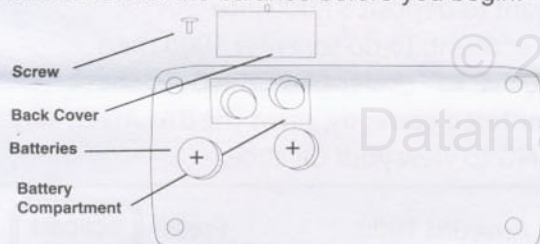

1. Make sure the calculator is off.
2. Place the calculator face down on a flat surface.
3. Use a small Phillips Screwdriver to remove the screw securing the back cover and lift it off.
4. Insert the new batteries with their positive (+) side up.
5. Replace the back cover and secure it with the screw.

CARE

Keep the calculator dry; if it gets wet, wipe it dry immediately. Use and store the calculator only in normal temperature environments. Handle the calculator carefully; do not drop it. Keep the calculator away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Warranty: One year from date of purchase.

Email: sales@datexx.com

with proof of purchase

WHY PEOPLE LOVE THE DB-413

Calculator Plus



This checkbook calculator not only tracks your balance, but provides the date and time as well. Can follow three different accounts with this product.

A must have to keep your accounts accurate!



Love it! It really helps you to keep up with your accounts. I have had one like this for 35 years, yes 35 years. My Mom bought one for my 16th birthday and have been using it ever since.

This is a product I couldn't live without!



I couldn't be happier with my new checkbook calculator. I've been using one since the 70s and when my last one quit working I was thankful you carried them. It makes keeping track of my accounts so much easier.

An Excellent Product



My wife and I have each been using one of these to keep track of our account balances, for many years now. Just enter your transaction \$'s accurately, and you'll find it to be a very handy "paperless" record keeping device. An excellent product that neither of us would be without!

TELL US YOUR STORY

We would love to hear your story or review of the DB-413 3-Memory Checkbook Calculator!

Visit Us at: www.datexx.com

Or follow us on: datexxinc

Sign Up Today!

for a chance to

Win A FREE TimeCube®!



<https://datexx.com/pages/win>