 


# CHECK CARD BALANCE TRACKER

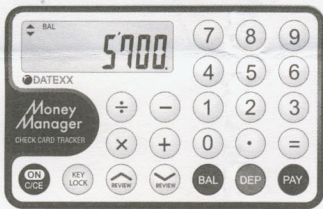

Owner's Manual

## Features

- 8-Digit Easy to Read LCD Display.
- Basic 4 arithmetic calculation ( + , - , x , ÷ ) with constant calculation
- Key lock function to prevent false key pressing.
- Check Card function for keeping status of your checking accounts
- Quick Balance Check - Every time turn ON the Money Manager, it automatically displays balance
- 100 step review memory for transactions
- Approximately 8 minutes auto power off.

## Specifications

**Power Source:** 1x LR1130 (Hg free battery)

## Precautions

- **Keep the Unit dry, if it wet, dry before use.**
- **Do not use harsh solvents or detergents to clean the unit. Wipe with a soft, dry cloth to clean.**

## Main Key Operations

**ON/C/CE:** Power on (as the unit wakes up from OFF, the balance amount will be shown automatically.)  
 Clear the errors  
 Press to clear calculations, can't clear account balance and review memory

**KEY LOCK:** After using the Money Manager, Press and hold "Lock" key for 3 seconds, the 'Lock' icon will be displayed and all the keys will be locked for security. To unlock it, just press and hold the "Lock" key for 3seconds.

**BAL :** Press once to recall the current account balance.

**DEP:** Press once to define the entry or the calculation result as the deposit amount.

**PAY:** Press once to define the entry or the calculation result as the payment amount.


**REVIEW:** Step review key - Press and hold for one second to activate auto review.

## Check Card Functions

The check card function is an easy way to keep track of your checking account or create a budget for your credit card spending. Just enter the account or budget amount one time, and you can review up to 100 steps of your deposits or payments records.

### 1 Enter Your Current Checking Account Balance

Enter Balance 1000 ▶ Press DEP Button ▶ Press BAL Button

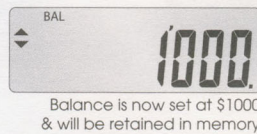

Your current balance will automatically show up everytime you turn the DC-80 ON. **Always double check your current balance with bank to ensure an accurate balance.**

To create a credit card budget, follow the same steps, but remember that the account balance is now your budget amount. (ex: The \$1000 would be your budget)


### 2 Making A Payment

Your account balance is \$1000 ▶ Enter Payment 200 ▶ Press PAY Button ▶ Press BAL Button



### 3 Making A Deposit

Your account balance is \$800 ▶ Enter Payment 300 ▶ Press DEP Button ▶ Press BAL Button

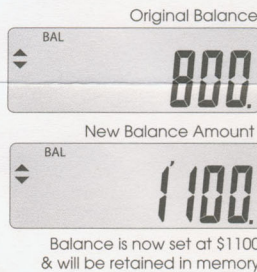


### 4 Review Transactions

You can review your last 100 deposits or payments in order, by using the review buttons. Your last 100 transactions will be retained in memory just like your balance.

### 5 Clearing Account Balance

Your account balance is \$1100 ▶ Press BAL Button ▶ Press BAL Button ▶ Enter Payment 1100 ▶ Press PAY Button ▶ Press BAL Button

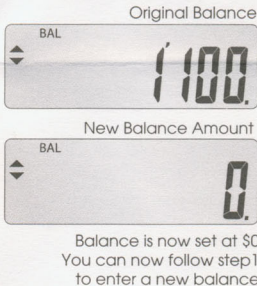

## Replacing the Battery

Remove the screws that hold the back cover in place and remove the cover and the old battery. + Side up

Place the new battery into the calculator with the positive(+) side facing up. Return cover and screw.