

How to Replace Batteries

Battery replacement is accomplished by removing the screws located the instrument back. Gently lift out the exhausted batteries and replace them with new batteries (type IEC-5R44) being sure that the side with the + symbol is visible. Replace the back and screws.

© 2020 Joerg Woerner
Datamath Calculator Museum

(C) 2020 Joerg Woerner
Datamath Calculator Museum